

PETSAFE® WIRELESS MAPPING FENCE QUICK START GUIDE

BEST PRACTICES

Refer to the important safety information in the manual.

Fully charge the Receiver Collar.

Test the Transmitter location before mounting it to the wall.

Position Transmitter to read the PetSafe® logo straight on and not sideways.

Do not mount Transmitter within 5 feet of large metal surfaces such as refrigerator, metal shelves, or washer/dryer.

See installation requirements in operating guide for complete list.




Place Boundary Flags at least 15 feet from the street.

Each boundary flag must be located between 15 and 90 feet from the Transmitter.

Each boundary flag must have a unique radial line to the Transmitter and cannot cross over another flag or block another flag.

Place each boundary flag between 3 feet and 5 feet apart, depending on the distance from the Transmitter.

Maximum number of Boundary Flags the system can accept is 128 flags.

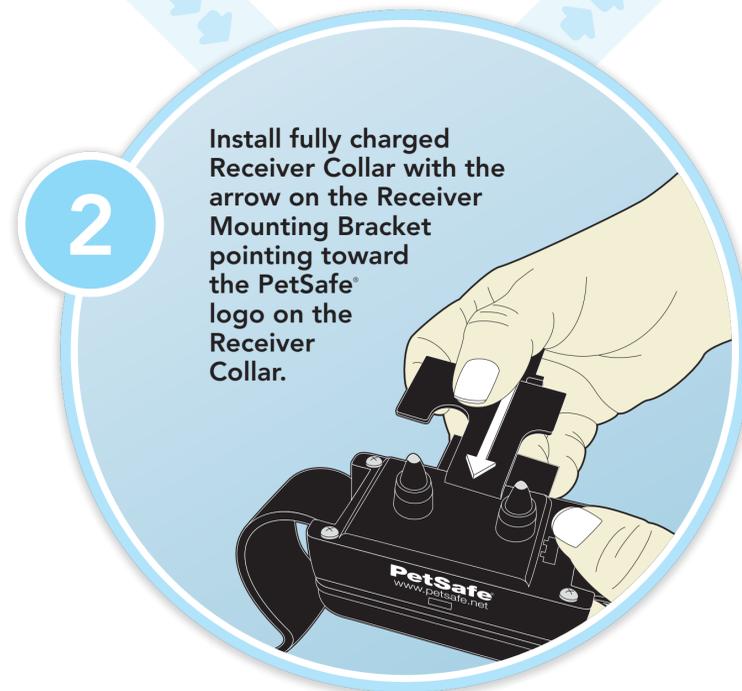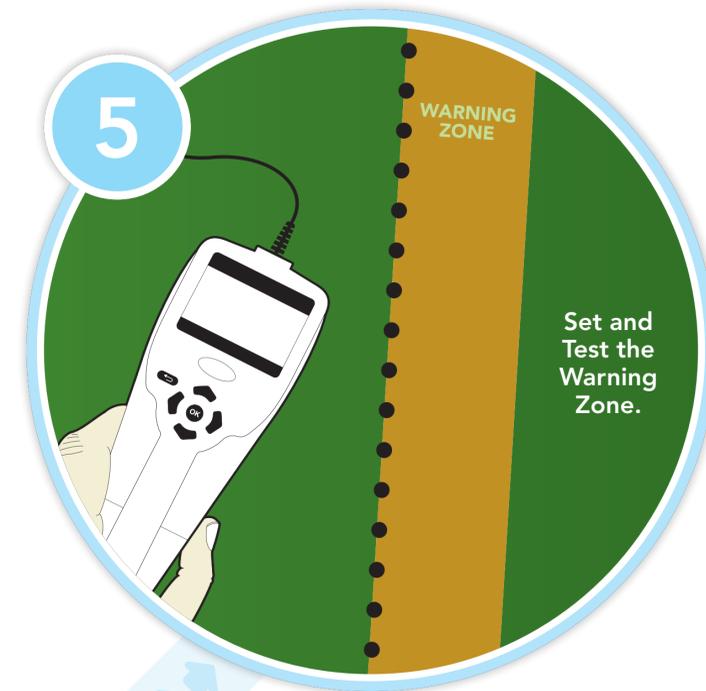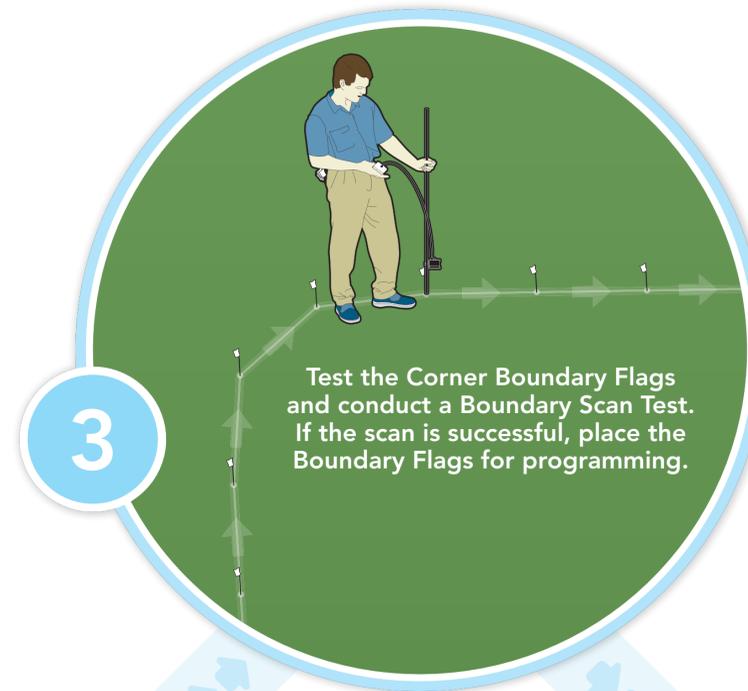

Proper training of your pet is essential to the success of the PetSafe® Wireless Mapping Fence. Please read the Training Guide.

If you have any issues, please feel free to contact our Customer Care Center at either www.petsafe.net or 1-800-732-2677.

LAYOUT SAMPLES



Full boundary

Requires minimum of 40 programmed Boundary Flags.




Partial boundary: Backyard only

Requires minimum of 10 programmed Boundary Flags.




Partial boundary: Front yard only, using fence as boundary

Requires minimum of 10 programmed Boundary Flags.

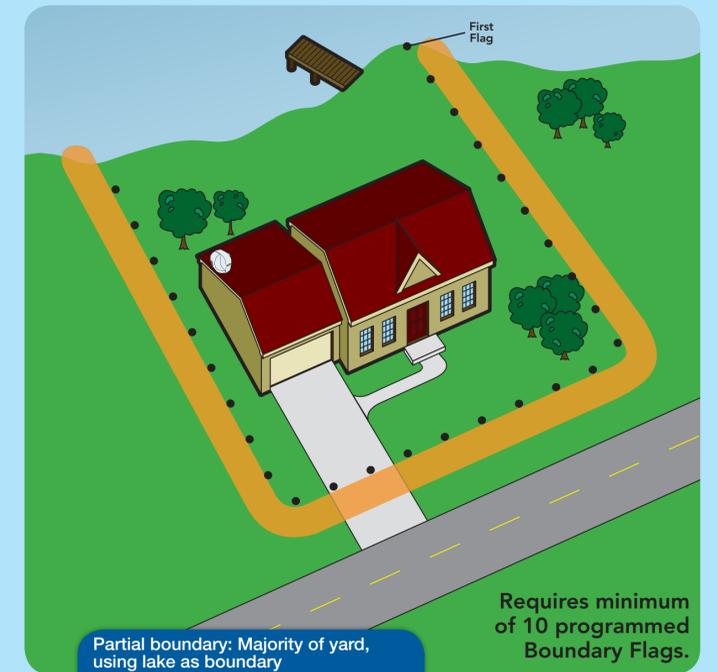

Partial boundary: Majority of yard, using lake as boundary

Requires minimum of 10 programmed Boundary Flags.

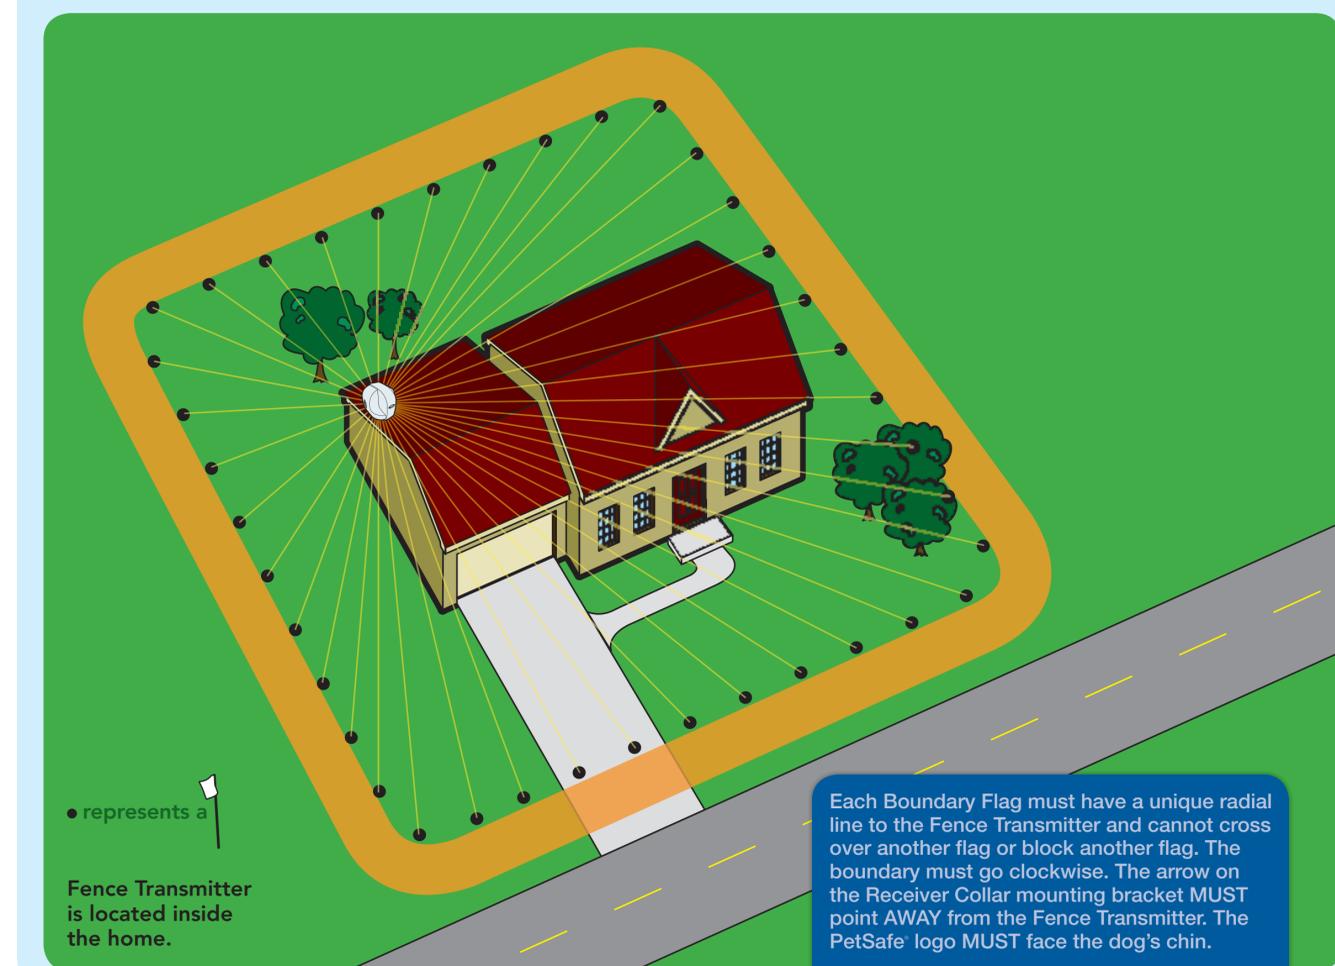

● represents a

Fence Transmitter is located inside the home.

Each Boundary Flag must have a unique radial line to the Fence Transmitter and cannot cross over another flag or block another flag. The boundary must go clockwise. The arrow on the Receiver Collar mounting bracket MUST point AWAY from the Fence Transmitter. The PetSafe logo MUST face the dog's chin.

ADD-A-PET



An unlimited number of pets can be added to the system and the same boundary as long as they are wearing a PetSafe Wireless Mapping Fence Receiver Collar model number PIF00-13652. To program a unique boundary for separate Receiver Collars, follow all of the same programming guidelines as the first Receiver Collar outlined in the Operating Guide.



protect. teach. love.

PLEASE VISIT US ONLINE AT WWW.PETSAFE.NET