 
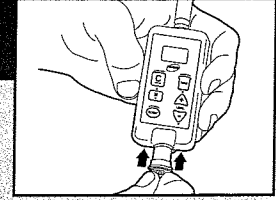 


## Quick Start Guide

ADV-300P, ADV-1000P & ADV-1002


### Step 1 Power Up

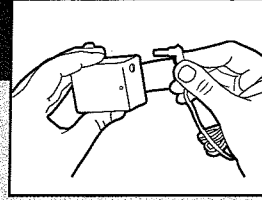

**COLLAR RECEIVER:** You **MUST** charge the collar for 12-14 hours prior to first use.

**HANDHELD TRANSMITTER:** Insert 2 6v alkaline batteries in the transmitter positive (+) side out. Attach antenna to transmitter (ADV-1000P and ADV-1002).

### Step 2 Match Components

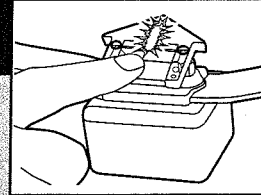


*Place test light across skin contacts. Press "C" button on transmitter, test light will illuminate to show stimulation.*

Remove receiver from charger. Collar light will flash a yellow or amber light. Within 30 seconds, press and hold the red "C" (continuous stimulation) button on transmitter. Collar light will pulsate red. The components now work together.

**ADV-1002 users:** Match yellow dog collar to the Dog 1 stimulation button; then repeat process for black dog collar and Dog 2 stimulation button on transmitter.

### Step 3 Adjust the Collar

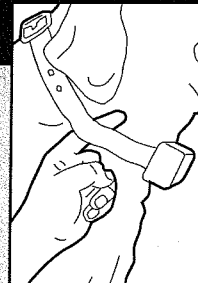


The collar receiver's skin contacts should be touching the skin of your dog's neck. The collar strap fit should be snug, yet loose enough to allow one finger to fit between the strap and dog's neck. Fit is important because a loose collar may cause inconsistent performance.

**Important:** Never leave the collar on the dog for more than 12 hours per day. See "Important Advice," page 5.

# Digital Advanced Trainers

## Models ADV-300P, ADV-1000P, ADV-1002

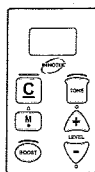


ADV-300P  
ADV-1000P

### Understanding Your Remote Training System

The ADV-300P has 7 levels of stimulation, and an operating range of up to 300 yards.

The ADV-1000P has 15 levels of stimulation, and an operating range of up to 1000 yards.

The ADV-1002 includes 2 training collars. It has 15 levels of stimulation per dog, and an operating range of up to 1000 yards.

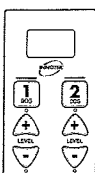

ADV-1002P

### Understanding the Remote

The handheld remote signals the collar receiver to produce stimulation and/or tone.

The transmitter is water-resistant but should not be immersed in water.

### Remote buttons

#### ADV-300P & ADV-1000P:

The left hand column includes 3 stimulation buttons:

**C (continuous).** Sends a stimulation signal to the collar receiver at the intensity shown in the display window. You control the length of stimulation by the time you press the button. For a short stimulation, press and release the button. For a longer stimulation, hold the button down. *Safety feature:* after 10 continuous seconds of stimulation, the system will lock out further stimulation for 10 seconds.



**M (momentary).** Delivers a brief, pre-measured tap of stimulation at the intensity shown in the display window.




**BOOST.** Sends continuous stimulation 2 levels higher than the currently selected level. For example, if the stimulation level is set at Level 2, a touch of the Boost control will stimulate at Level 4. Some trainers like instant access to a higher setting for circumstances where the dog may not respond to lower levels, such as around high distractions.



**TONE.** Produces a training tone from the collar. No stimulation is delivered.




**+ (level up).** Increases stimulation intensity level.

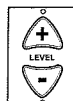

**- (level down).** Decreases stimulation intensity level.

INNOTEK®'s Rapid Ramp™ feature means when you hold down the Level Up/Down button for more than a fraction of a second, the digits will advance/decrease rapidly; great in getting to higher stimulation levels quickly.

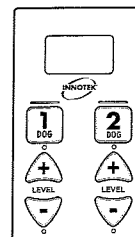

### Remote buttons ADV-1002:

**2 columns:** Note the controls on the left hand column control the Dog 1 collar, right hand column control Dog 2 collar. Match the yellow collar to the yellow-color-coded Dog 1 control; match the black collar to the black-color-coded Dog 2 control.

**Dog 1/Dog 2.** Sends stimulation signal to the collar receiver at the intensity shown in the display window. You control the length of stimulation by the time you press the button. For a short stimulation, press and release the button. For a longer stimulation, hold the button down. *Safety feature:* after 10 continuous seconds of stimulation, the system will lock out further stimulation for 10 seconds.

**+ (level up).** Increases stimulation intensity level for selected dog.



**- (level down).** Decreases stimulation intensity level for selected dog.

*Note:* tone feature is not available on the ADV-1002.


INNOTEK®'s Rapid Ramp™ feature means when you hold down the Level Up/Down button for more than a fraction of a second, the digits will advance/decrease rapidly; great in getting to higher stimulation levels quickly.

### The Digital Display


#### ADV-300P & ADV-1000P:

When a stimulation button is pressed, the display will indicate the stimulation level being transmitted.

When the Level UP or Level DOWN button is pressed, the display will show the new level of stimulation selected.

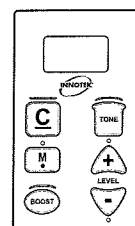

**Tone (ADV-300P & ADV-1000P):** When the tone button is pressed, a small bar will appear to the left of the stimulation level 0 as no stimulation is being delivered.

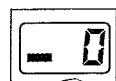

**LO BAT** appears in the display when any button is pressed and the transmitter batteries need to be replaced.

### The Digital Display

#### ADV-1002:

When a stimulation button is pressed (Dog 1 or Dog 2), the display will indicate the stimulation level being transmitted. When you release the button, the dog number (Dog 1/Dog 2) and the set stimulation level will alternate briefly.

### Batteries

The remote operates on 2 replaceable 6v alkaline batteries. Lithium batteries will not operate the system effectively. Alkaline batteries are commonly available where you bought your system, where batteries are sold, or call 1-800-826-5527 to order direct from us.

### Understanding the Collar Receiver.

The collar receiver produces a harmless yet effective stimulation and emits a training tone (on ADV-300P or 1000P only). The receiver is waterproof and is safe for your dog to wear even while swimming. The collar is rechargeable; the collar's light glows red while charging.

**Blinking green light:** Collar is on and ready to use.


**Pulsating red light:** Stimulation is being delivered.

**Pulsating green light:** Tone only being delivered.

**Blinking red light:** Low battery; charge the collar.

**Solid green light:** Over-stimulation lockout; wait 10 seconds.

**Blinking yellow light:** Collar awaiting match to transmitter.

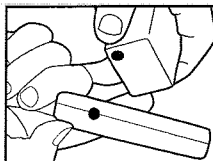


### Turning the Collar Receiver ON and OFF

Before putting the collar on dog, briefly touch the red dot on the transmitter to the red dot on the receiver.


**ON** – A brief green light and tone indicate that the collar is on, ready to use. A green light will blink while the collar is on.

**OFF** – A brief solid red light and tone indicate the collar has been turned off. No light shows on the collar when it is turned off.

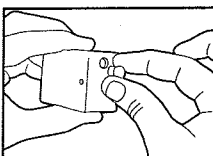

### Charging the Collar Receiver

The receiver has a longlife NiMH battery. It will take 12-14 hours to fully charge and will operate up 72 hours between charges depending on use and temperature. Extreme temperatures (hot or cold) can significantly affect battery life. Always charge at room temperature. It is recommended to only charge collar when the low

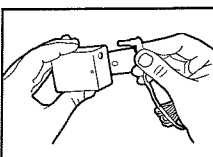


battery light comes on. Collar should be fully charged once every 2-3 months. The receiver will need to be matched to the transmitter after every charging session. Follow Step 2 of the Quick Start Guide.

**ADV-1002 users:** Your system includes a "Y"-shaped adapter for charging both collars simultaneously. Connect the 12v DC adapter to single end of the "Y" adapter cable. Then connect each of the twin plugs of the "Y" adapter cable to each of the collar receivers.

**Matching the Transmitter and Receiver.** Locate the red dot on the transmitter and on the receiver. Hold the transmitter dot to the receiver dot until the receiver LED glows green, then amber. Separate the dots and immediately press and hold the transmitter "C" stimulation button. The collar LED will pulsate red to indicate stimulation is being delivered. The components now work together.

**ADV-1002 users:** Match transmitter and receiver as above, starting with the yellow collar receiver and the Dog 1 stimulation button. Then repeat with the black collar and the Dog 2 stimulation button.

**Important:** You need to perform this matching step anytime you replace transmitter batteries, or cannot match the components straight from the charger.

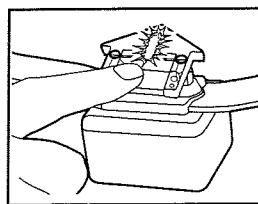

### Testing the Collar Receiver

Hold the test light across the receiver skin contacts so that the tips touch the wires inside the two openings. Gentle pressure may be needed.

Press the transmitter button for stimulation. Test light will illuminate for the length of time stimulation is being delivered. The intensity of the light will increase as the level increases.

### Operating Range

Your remote communicates with the dog's collar via a radio signal. A variety of factors may affect your system's operating range, positively or negatively. These include weather, terrain, vegetation, proximity to metal structures including buildings and fences, and other factors. Some things like outside radio interference and emissions will diminish your range.

For best results at maximum distances, keep fingers away from the antenna. Hold the transmitter upright, above eye-level, and away from your body.

### Compliance with US FCC and European Telecommunications Regulations

This INNOTEK® Remote Training System is designed to meet worldwide requirements for telecommunications compliance. This system contains both receiver and transmitter devices. In the US, each transmitter device complies with Part 95 and/or Part 15 of the FCC rules; each receiver device complies with Part 15 of the FCC rules.

Each device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Each device may display indications as to where this system is compliant worldwide. Note that in some countries, the use of this INNOTEK® Remote Training System may be limited due to national frequency planning requirements, and the user is always responsible for respecting national and local rules before operating.

### Training Tips

- Watch the included DVD to get the basics for training your dog properly with a remote trainer.
- We recommend your dog be at least six months old before starting a remote training program.
- Always praise your dog for good behavior!
- Teach him what the commands mean before introducing the collar as a reinforcement tool.
- Keep training sessions brief, about ten minutes of training and then a rest or play period of at least equal length.
- Dogs learn through repetition. You may have better training success if you can elicit an undesired behavior when you can anticipate it. For example, if the dog misbehaves and jumps on visitors, have someone come in and out of the front door several times over a half-hour period. You'll be expecting it and will be ready to teach your dog the right behavior.
- Always end a training session on a positive note. Let the dog have success. This way he'll look forward to the next session.
- Training should be fun for both you and your dog. Never train when you are angry. If you get frustrated during training, stop and come back to it later. Your dog will learn better when you are both relaxed.
- The goal of training is to condition your dog to respond to your verbal commands under all situations. You should plan on using the collar for at least four months. A good rule is, once started with a remote trainer, to regularly have the collar on when you take the dog out. This will ensure that he will always be imprinted with the correct response to your commands and that you are always in control.
- Take advantage of the **FREE** Professional Training Support that comes with your INNOTEK® remote trainer purchase.

### Troubleshooting

If the collar appears not to be working, try the following:

- Adjust the collar strap to fit.
- Test the collar. If no light, charge the battery.
- If the transmitter display is out, replace the transmitter battery.
- Turn ON the components as shown in the Quick Start Guide.
- Match transmitter and receiver as described on page 3.
- Check that the skin contacts are snug
- Ensure that the contacts are touching the dog's skin. If necessary, trim the dog's hair or use the longer contacts to ensure proper skin contact. Never shave the dog's neck.
- Try a stronger stimulation level.

If you cannot solve the problem by following these steps, please call 1-800-826-5527.

#### IMPORTANT ADVICE

1. Read the complete instructions and follow all directions. If you have any questions, please call 1-800-826-5527.
2. This device is intended for use only on dogs. Never attempt to use it for any purpose not described in this manual.
3. Keep out of the reach of children
4. Never perform set-up procedures while the collar is on your dog.

5. Any collar worn for extended periods can cause a condition similar to bedsores, known as Pressure Necrosis. To reduce the possibility, you must do the following:

- Never leave the collar on the dog for more than 12 hours per day.
- Examine the dog's neck daily for any signs of a rash or a sore.
- Supervise your dog during the first 2 days of training.
- Check the fit to prevent excessive pressure; you should be able to insert one finger between the collar strap and your dog's skin.
- Wash the dog's neck area and the probes of the collar weekly with a washcloth and mild hand soap; rinse thoroughly.
- If the condition persists beyond 24 hours, see your veterinarian.

6. Metal tags or collars should be removed when using the remote training collar as they may interfere with proper operation.

7. Do not attempt to dismantle or repair any components of this system; doing so will void the warranty in full. The computerized circuitry should be serviced only by an authorized expert.

8. Realize that because dogs have unique temperaments, there is no way of knowing how your dog will react to the introduction of a remote training collar system. For the safety of your dog, a long lead should be used during initial training so you have control of the situation.

9. If you have reason to believe that your dog may pose a danger to others, harm itself, or react adversely to the collar, do not rely solely on this product to train your dog. If your dog shows signs of growling, snarling or biting while using the collar, stop immediately. Aggression in dogs has many causes. We recommend that you consult a knowledgeable professional dog trainer or animal behaviorist who has experience with aggressive dogs if your dog has shown any of these characteristics.

10. Occasionally, a dog cannot be trained to respond to a remote training collar. Sometimes even a properly trained dog may disobey a command. Therefore, Invisible Technologies, its distributors, and dealers cannot guarantee that the system will in all cases keep the customer's animal from disobeying commands.

**Register Your Product:**  
Your product can be registered  
on our website at

[www.innotek.net](http://www.innotek.net)