


INNOTEK®

Quicker Training. Better Dogs.

FIELD PRO

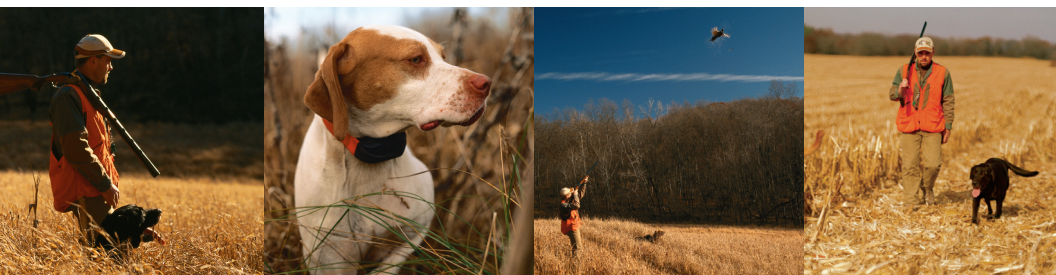

Gear Dogs Respect™

INNOTEK® FieldPro™
Remote Trainers
Owner's Manual


FP-RANGER
FP-SCOUT



INNOTEK® FieldPro™
RANGER™ Remote Trainer Kit
Model FP-RANGER

**Model FP-SCOUT
 is on page 5.**

RANGER™ KIT CONTAINS:

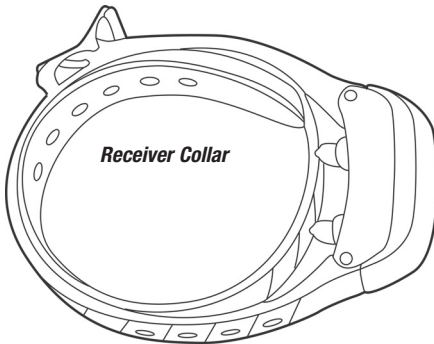


Ranger Hardware includes:

- Antenna
- Test Light
- Lanyard
- Belt Clip
- Long Contacts
- Contact Wrench

*Ranger
 Transmitter*




Ranger Charging System

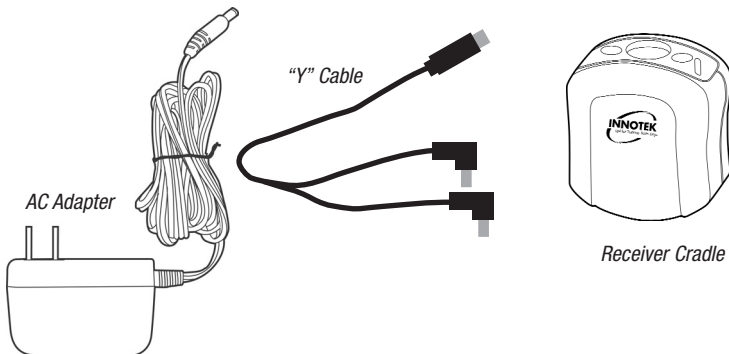

FIRST THINGS FIRST

Your deluxe FieldPro Ranger™ Transmitter and Receiver collar need to charge their batteries before you can use them. While your Ranger Transmitter and Receiver collar are charging (Quick Start Guide Step 1), read the entire manual to become familiar with your FieldPro Ranger system.

Step 1 Charging the Batteries

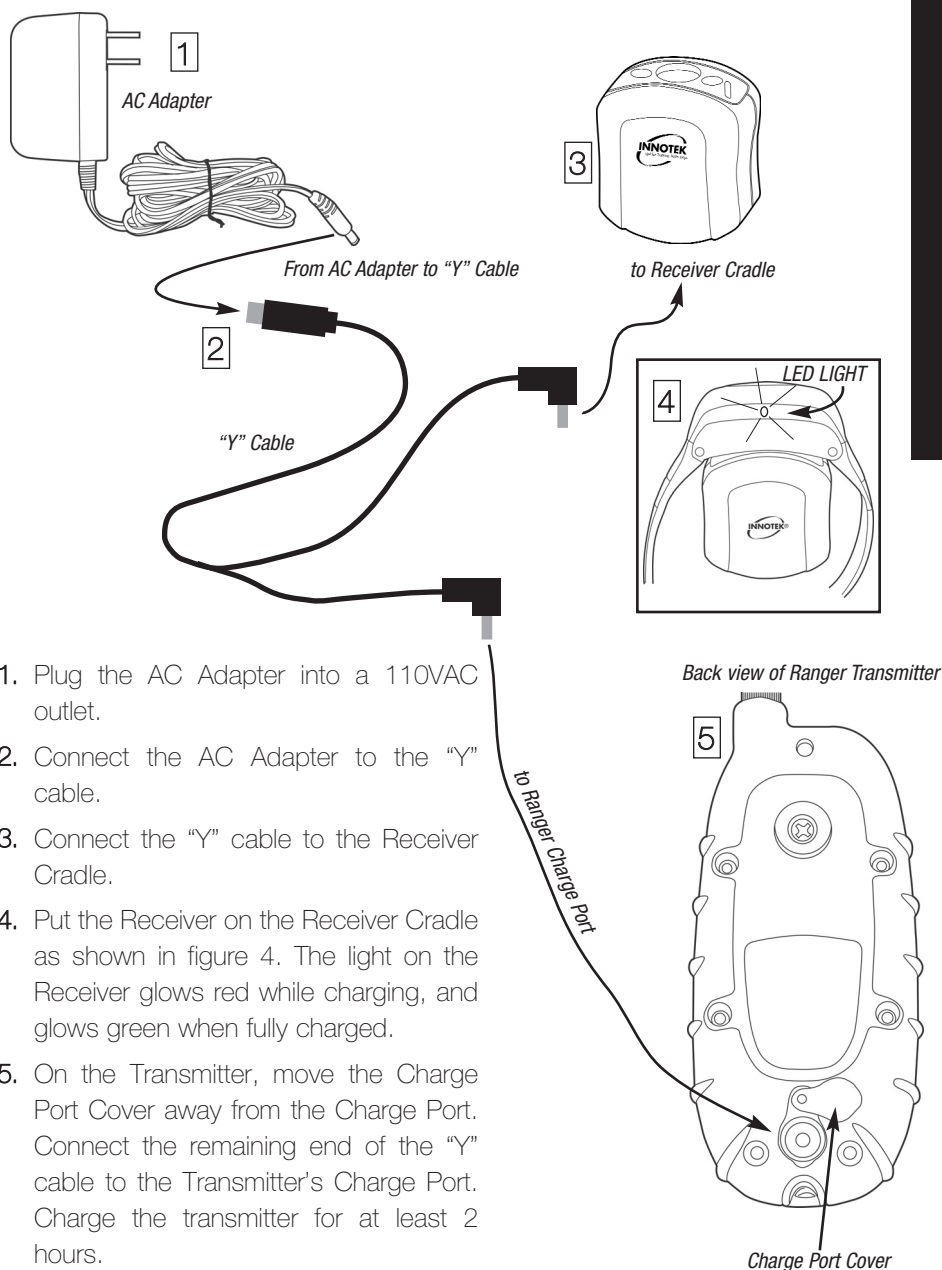


1. Plug the AC Adapter into a 110VAC outlet.
2. Connect the AC Adapter to the "Y" cable.
3. Connect the "Y" cable to the Receiver Cradle.
4. Put the Receiver on the Receiver Cradle as shown in figure 4. The light on the Receiver glows red while charging, and glows green when fully charged.
5. On the Transmitter, move the Charge Port Cover away from the Charge Port. Connect the remaining end of the "Y" cable to the Transmitter's Charge Port. Charge the transmitter for at least 2 hours.

To maintain maximum range, keep the Transmitter antenna away from all magnets (there is a magnet in the Charging Cradle).

RANGER™ Quick Start Guide

Step 2 Turning the Receiver ON and OFF

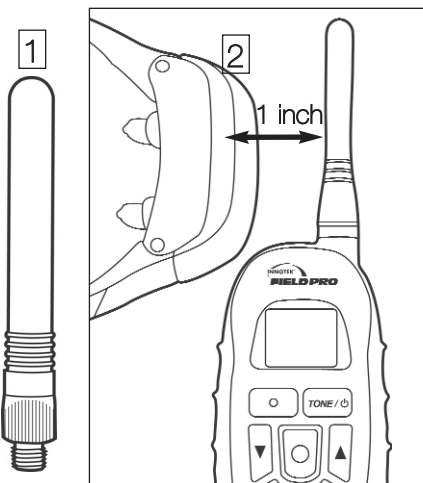

3 Press 


1. Put the threaded end of the Antenna into the Transmitter and turn until finger-tight.
2. Hold the Receiver one inch away from the Transmitter— **do not touch the Receiver's contacts** — you might cause self-test to fail.
3. Press and hold the Tone button. The Receiver's light will turn on and show the level of battery charge (solid green, amber, or red). Release the Tone button.
4. To turn Receiver OFF, hold Receiver and Transmitter one inch apart and press and hold the Tone button. The Receiver will emit a shut-down tone sequence, and the light will glow solid red, then go out. Release the Tone button.

The ON/OFF command only works when the Transmitter and Receiver are in close proximity; it will not work at a distance. The ON/OFF command only works when the Transmitter antenna is installed.

Never turn the unit ON or OFF while your dog is wearing the receiver collar.

NOTE for Two Collar Use: Set the Transmitter to Dog 2 and repeat steps 2 and 3 using the second collar.

Step 3 Fit the Collar on Your Dog

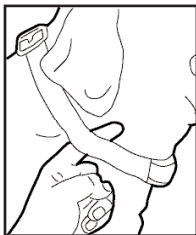

Cinch the collar around your dog's neck to find the proper fit. The collar fit should be snug, yet loose enough to allow one finger to fit between the strap and the dog's neck. Fit is important because a loose collar may cause inconsistent performance.

Step 4 Begin Training

Use the buttons on the **Ranger** keypad to train your dog. The buttons are discussed in detail later in this manual.


INNOTEK® FieldPro™ SCOUT™ Remote Trainer Kit Model FP-SCOUT

**Model FP-RANGER
is on page 2.**


FIRST THINGS FIRST

Your FieldPro Scout™ Receiver collar will need to charge up its battery before you can use the training system. While your Scout Receiver collar is charging (Quick Start Guide Step 1), read the entire manual to become familiar with your FieldPro Scout system.

SCOUT™ KIT CONTAINS:

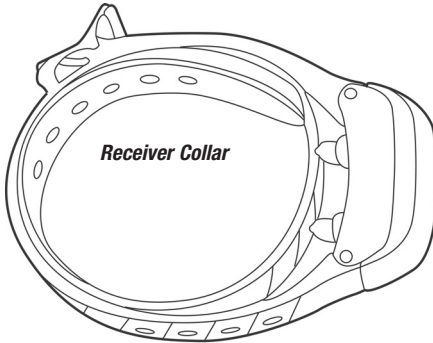


*Scout
Transmitter*

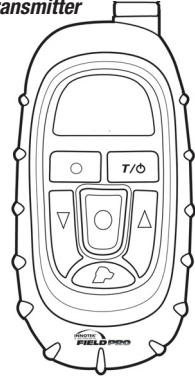

Scout Hardware includes:

- Antenna
- Test Light
- Lanyard
- Long Contacts
- Contact Wrench
- 3 AAA batteries


Scout Charging System

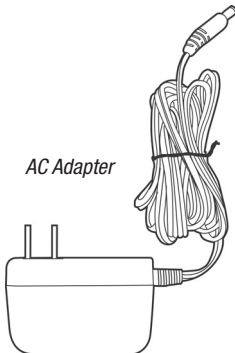

Receiver Cradle

SCOUT™ Quick Start Guide


Step 1 Install Transmitter Batteries and Charge Receiver

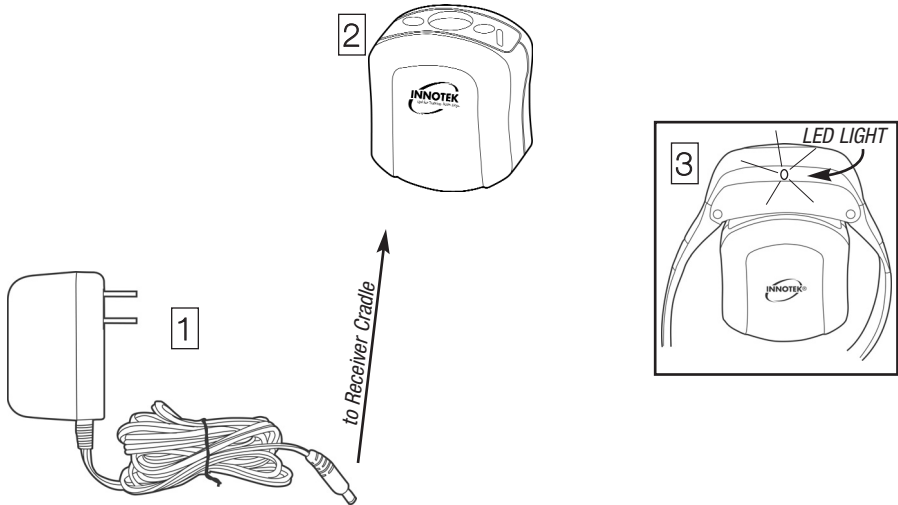

1. Plug the AC Adapter into a 110VAC outlet.
2. Connect the AC Adapter to the Receiver Cradle.
3. Put the Receiver on the Receiver Cradle as shown. The light on the Receiver glows red while charging, and glows green when fully charged.


4. Install Transmitter Batteries:

- Remove the battery cover from the back of the Transmitter.
- Insert 3 AAA alkaline batteries (oriented as shown in battery compartment).
- Replace the battery cover.
- When the batteries are put in, the Scout Transmitter is in battery conservation mode; press any button to activate the transmitter.

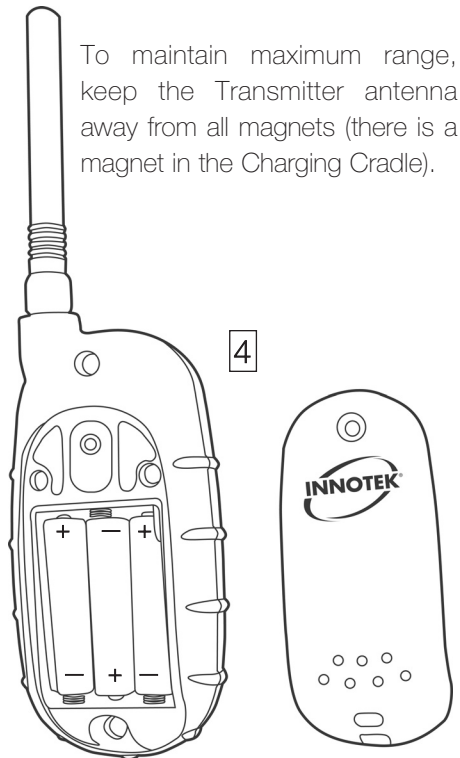

Note battery polarity when installing batteries.

Step 2 Turning the Receiver ON and OFF

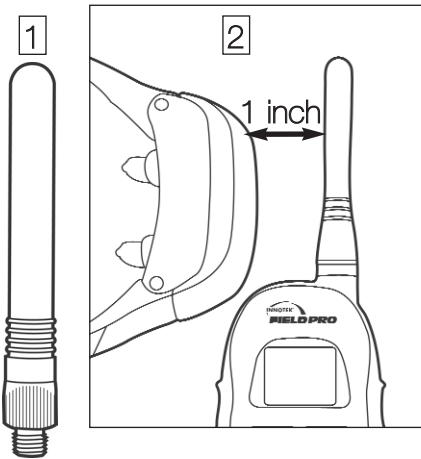

3 Press 


1. Put the threaded end of the Antenna into the Transmitter and turn until finger-tight.
2. Hold the Receiver one inch away from the Transmitter — **do not touch the Receiver's contacts** — you might cause self-test to fail.
3. Press and hold the Tone button. The Receiver's light will turn on and show the level of battery charge (solid green, amber, or red). Release the Tone button.
4. To turn Receiver OFF, hold Receiver and Transmitter one inch apart. Press and hold the Tone button. The Receiver will emit a shut-down tone sequence, and the light will glow solid red, then go out. Release the Tone button.

The ON/OFF command only works when the Transmitter and Receiver are in close proximity; it will not work at a distance. The ON/OFF command only works when the Transmitter antenna is installed.

Never turn the unit ON or OFF while your dog is wearing the receiver collar.

NOTE for Two Collar Use: Set the Transmitter to Dog 2 and repeat steps 2 and 3 using the second collar.

Step 3 Fit the Collar on Your Dog

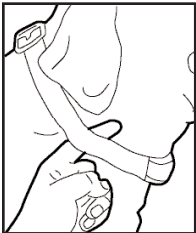

Cinch the collar around your dog's neck to find the proper fit. The collar fit should be snug, yet loose enough to allow one finger to fit between the strap and the dog's neck. Fit is important because a loose collar may cause inconsistent performance.

Step 4 Begin Training

Use the buttons on the Scout keypad to train your dog. The buttons are discussed in detail later in this manual.

THE TRANSMITTER

The Transmitter signals the electronic Receiver collar to produce a harmless, yet effective stimulation and/or tone. The no-slip grip feels comfortable in your hand for extended periods of training or field time.

Transmitter Keypad Buttons

Tone/On-Off – (upper right button) – When pressed, causes the Receiver to produce a tone. No stimulation is delivered. This button is also used to turn the Receiver on and off.



Ranger



Scout

Stimulation (red central button) referred to as the ‘Stim button,’ sends stimulation signal to the receiver collar at the intensity shown in the transmitter display. Button features one raised bump to easily locate by touch, even with gloves on! See “*Set Stim Button Stimulation Level.*” on page 10.




Level down ▼ & Level up ▲ – adjusts the stimulation intensity through a range of levels (from 1 Low to 15 High).

An INNOTEK Exclusive: Hold either the level up button or the level down button for half a second for INNOTEK’s Rapid Ramp™ feature — display scrolls through stim levels very quickly.

Dog Select – (bottom center button) – Switches Transmitter control from Dog (Collar) 1 to Dog (Collar) 2, and back, for training two dogs. You can purchase a second collar to expand the system for training two dogs.



Alternate Stimulation (Alt Stim) – (top left red button) – When you press the Alt Stim button, the  symbol displays.

Ranger owners: you may program this preset button to a desired stimulation level. See “*Alternate Stimulation*” on page 11.

Scout owners: This button is always set to level 10 stimulation for use in strong distractions or dangerous situations.

RANGER ONLY:




C/M – (bottom left button) – Switches the stimulation control between **Continuous** stimulation (Receiver stims for as long as button is pressed, up to 10 seconds) or **Momentary** pulse stimulation (one quick stim per button press, also called Nick stimulation or Brief-tap stimulation).


Program – (bottom right button) – Hold down this Prog button until the PROG symbol appears in the display, then release the button. The Transmitter is now in programming mode.



Throughout this manual, items in a bordered box apply to **RANGER ONLY**.

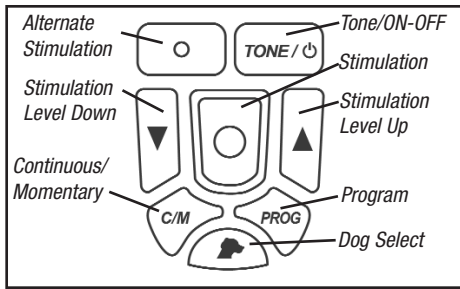

**RANGER keypad above
SCOUT keypad below**

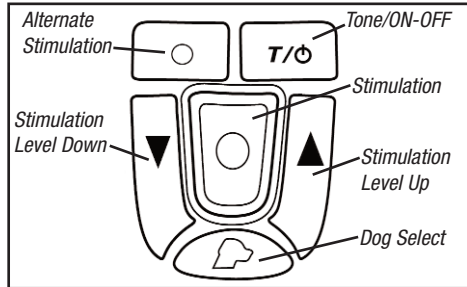

Transmitter Display

The display stays on for 30 minutes after a button press. After 30 minutes with no button presses, the display shuts off. Pressing any button will cause the display to turn back on.

The various symbols you might see on the display are explained below.



Numeric readout – Shows the chosen stimulation level. Adjust with the level up/level down (arrow) buttons. See *Set Stim Button Stimulation Level* on page 10.



Dog 1 / Dog 2 – Switch between Receiver collars by pressing the Dog Select button. The symbol displayed is

the active dog receiver collar. See *Two Dog Systems* on page 15.



Tone – This symbol appears whenever Tone is part of the Stimulation type selected. See *Program the Stim Type* on page 10.



Prog – This symbol appears when the Transmitter is in programming mode. See *Programming the Transmitter* on page 10.



Battery Indicator – The battery indicator provides constant awareness of your battery's power level. See *Battery Indicator* on page 12 for more-detailed information on the Battery Indicator.

RANGER ONLY:

Backlight – The Ranger Transmitter features a backlit display. The Ranger display backlight stays on for 5 seconds after a button press.



Continuous or Momentary – If the straight line is shown (—), the stimulation is in Continuous mode. If just the dot is shown (•), stimulation is in Momentary mode. See *C/M* on page 8.

Programming The Transmitter

Press and hold the Prog button until the PROG symbol displays, then release the button. The Transmitter is now in Programming mode. After all programmable (changeable) settings are chosen, press and release the Prog button again to save settings and exit programming mode.



Turning ON the Transmitter

Power up the Transmitter by pressing any button. You will see the display turn on when you press any button.

Reset All Programmable Settings

Press ▼ and ▲ at the same time to reset all programmable settings to the default settings.

Transmitter Default Settings

Dog 1&2 Stim Type: **Stim Only** (Continuous)

Dog 1&2 Primary Stim Level: **5**

Dog 1&2 Alt Stim Level: **10**

You can program the above options for your Transmitter, except that the Scout Transmitter's Alt Stim level is not programmable.

Set Stim Button Stimulation Level

To change the stimulation level for the Stim button:


Press ▼ or ▲ until the desired stimulation level is displayed. When the Stim button is pressed, the Receiver will deliver stimulation at this setting.

RANGER ONLY:

Program the Stim Type (Tone Option)

For Ranger Transmitters, stimulation may be delivered without a tone or with a tone. The Transmitter's default setting is *Stim without Tone*.

To choose Stim Tone Option:

1. Choose desired dog using the Dog Select button. 
2. Press and hold the Prog button until the PROG symbol appears in the Transmitter display. Release the Prog button. 
3. Press and release the Tone button. If you keep pressing the Tone button, the selection cycles through these choices:
 - *Stim without Tone* (shows no tone symbol)
 - *Stim with Tone* (shows a solid tone symbol)
 - *Double Reward* (explained on the next page; shows a flashing tone symbol)



When set to Stim without Tone, the Transmitter displays only the stim level. For Stim with Tone, the display shows the stim level and a solid tone symbol. When set to Double Reward a flashing tone symbol displays.



4. Press and release the Prog button to save setting and exit programming.

For additional information regarding using the Tone, see *Training Tone Option* on page 16.







Double Reward

Double Reward is the term used when a stimulation is followed by a half-second delay and then a half-second reward tone.

Ranger Transmitter:

Follow *Program the Stim Type* directions in the previous column to program your Ranger transmitter for Double Reward.

Scout Transmitter:

1. Choose desired dog using  the Dog Select button.
2. Press the up arrow  and  at the same time until the PROG symbol appears in the Transmitter display.
3. Press  to switch between *Stim without Tone* and *Double Reward*. (Flashing tone symbol  in display means Double Reward, no tone symbol means Stim without Tone.) Repeatedly pressing the Tone button switches between these two choices.
4. Press the down arrow  to save setting and exit programming.

Alternate Stimulation (Alt Stim)

Some trainers depend upon instant access to a higher stimulation setting for circumstances where the dog may not respond to lower levels, such as a high distraction environment. Your Transmitter features a red, preset Alt Stim button that you can use to deliver an alternate (higher) level of stimulation. Ranger and Scout Alt Stim buttons are factory-set to level10.

RANGER ONLY:

Only Ranger Transmitters can program a different stim level for the Alt Stim button.

Program the Alt Stim Button

To change the stimulation level of Ranger's Alt Stim button:



1. Press and hold  until the PROG symbol is displayed.
2. Press  (alt stim button).
3. Press  or  until you get to the desired stimulation level.
4. When finished, press and release the  button.

RANGER ONLY:

Ranger Transmitter Belt Clip

1. Press down and hold the Release on the Belt Clip.
2. Slide the Belt Clip onto the lug on the back of the Ranger Transmitter.
3. Let go of the Release and the Belt clip will stay in place on the back of the Transmitter. The Transmitter will swivel on the Belt Clip.

If you don't want to use the Belt Clip, you may wish to remove the lug on the back of the transmitter. Use a phillips head screwdriver to remove the lug.

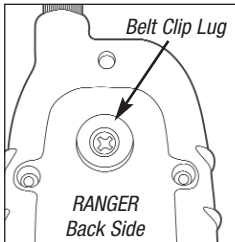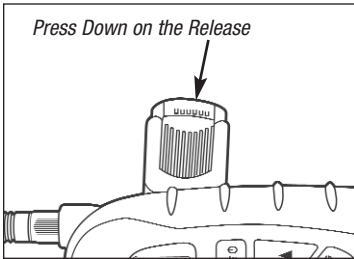

Battery Indicator



*Battery is at 2/3 to Full capacity.
Transmitter is fully functional.*



*Battery is at 1/3 capacity.
Transmitter is still fully functional.*



*Battery is at 1/6 capacity.
Transmitter will operate the Receiver, but
recharge or replace Transmitter battery
as soon as possible.*



*Battery is almost dead.
Transmitter is unable to operate the
Receiver.*

When the Battery Indicator shows the low battery symbol (1/6 capacity), either recharge your Ranger Transmitter soon, or replace your Scout batteries soon. When just the battery outline is displayed, the Transmitter's battery is unable to power transmissions to the receiver. Transmitter must be recharged (or Scout batteries replaced) to regain operation.



Battery Cautions


Do not charge batteries every night. To maximize battery life, use the Transmitter until the low battery symbol (1/6 capacity) displays, and use the Receiver collar until the LED light blinks red.

- Do not disassemble batteries
 - Do not short circuit batteries
 - Do not expose to high temperature: 60°C/140°F
 - Do not incinerate batteries
 - Keep batteries out of reach of children
- Batteries must be recycled or disposed of properly. Batteries should **NEVER** be discarded in municipal waste.

Cold Weather Operation

In cold temperatures (10°F or below), the liquid crystal display (LCD) on your Transmitter may be dim or slow to respond. Wait until the display becomes visible before selecting any training commands.

Cold temperatures may lead to a premature low battery signal, so keep the transmitter close to your body during cold weather. One way to keep the transmitter close to your body is by using the lanyard.

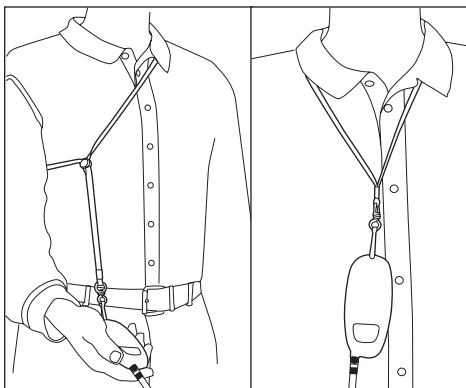

Use the Lanyard: Attach the included lanyard to the Transmitter. Slip the lanyard over your head and shoulder (above left) or position in front of you (above right) to carry your Transmitter close to your body. Your body's warmth will improve cold-weather operation.

Operating Range

Your Transmitter communicates with the Receiver collar via a radio signal. The system's operating range, as stated on packaging, is based upon line-of-sight. For maximum range, keep your fingers away from the antenna during use, and always keep the antenna away from all magnets. As shown at right, hold the transmitter upright, at or above shoulder level, and away from your body.


THE RECEIVER

The lightweight, comfortable electronic Receiver is integrated into a sleek fashionable collar strap your dog wears. The Receiver produces a harmless, yet effective stimulation and can emit a training tone. The Receiver is waterproof and is safe for your dog to wear even while swimming.




CAUTION: Your FieldPro

Transmitter and receiver collar are factory sealed to be waterproof. If you disassemble the case for any reason, INNOTEK can no longer assure you that the unit is waterproof.

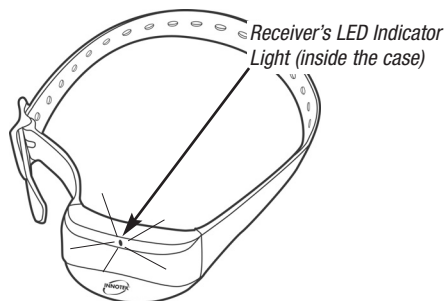


The Receiver is rechargeable; the Receiver's LED Indicator light glows red while charging and glows green when charging is complete.

The Receiver uses the LED to let you know its status. Refer to the *Receiver Status Indicators* table on the next page.

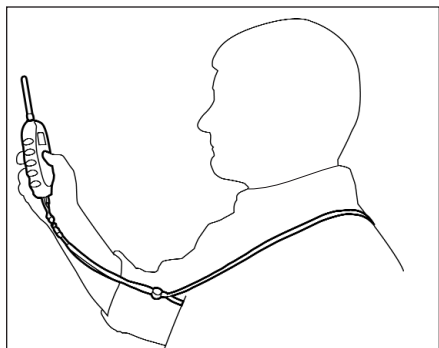

Receiver Status Indicators		
Status Light	Alarm	Condition
Pulsating Green	Duration of Tone Button press	Tone Only — No Stimulation
Pulsating Red	Duration of Stimulation Button press	Stimulation being delivered
Continuous Green	No Tone	Over-stimulation warning: Receiver is locked out for 10 seconds
Blinking Green	No Tone	Receiver battery is at 60% strength or better
Blinking Amber	No Tone	Receiver battery is 60 — 20% strength
Blinking Red	No Tone	Receiver battery is less than 20% — Recharge now
After removing receiver from charging cradle...		
Continuous Green, Amber, or Red	No Tone	Battery indicator — see above
Continuous Red	Tone for 20 seconds	Self-test failure; Receiver is not operational
While receiver is on charging cradle...		
Continuous Red	No Tone	Battery charge in progress
Continuous Green	No Tone	Battery charge complete
No Light	No Tone	Battery charge failure

Power Up

To turn the Receiver ON or OFF, hold the Receiver within one inch of the Transmitter antenna as shown in the Quick Start Guide. Be careful, do not touch the metal contacts that touch your dog's skin. Press the Tone/ ON/OFF button. When turning ON, the Receiver's light will show battery charge level (green, amber, or red).

This ON/OFF command only works

when the Transmitter and Receiver are close together; it will not work at a distance. Never turn the system on or off while your dog is wearing the collar

Auto Shut Off


When the Receiver is on and doesn't receive a command from the Transmitter for 6 straight hours, it will automatically shut itself off. This INNOTEK feature saves Receiver battery power for field work, rather than using it up being idle. Follow Power Up instructions (bottom of previous column) to turn on your Receiver again.

ReadyTest™ Self-Test

When you remove the Receiver from the charging cradle, it automatically goes into ReadyTest™ (a diagnostic self-test) for 5 seconds. The Receiver's internal diagnostics check the battery charge level (the Receiver LED light indicates battery charge level) and checks that all circuits are working. Do not touch the metal contacts during this test. Touching the contacts after removing the Receiver from the charging cradle may cause ReadyTest™ to fail. ReadyTest™ gives you confidence that your Receiver is working properly, and is ready to go. After the Receiver passes ReadyTest™, it shuts itself off. If ReadyTest™ fails, the unit makes a 20-second tone, the LED glows solid red for 20-seconds, and then shuts off. A Receiver that fails ReadyTest™ will not respond to the Transmitter's commands. To retest the Receiver, place the Receiver back on the charger for 5 seconds, then remove it. **Do not touch the metal contacts.** If the unit repeatedly continues to fail, call us at **1-800-826-5527**.

Fitting the Collar and Receiver

The collar strap should fit snugly towards the top of your dog's neck with the receiver on the bottom of the neck.

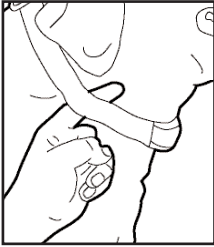

Check that the INNOTEK® logo is right side up. You should be able to get one finger between the collar strap and your dog's neck. The contacts must touch the dog's skin for proper operation. A little hair thinning may be required. **Do not shave your dog's neck.**

Occasionally, check the tightness of the contacts to ensure they will not be lost from the Receiver. Lost parts are not covered under your warranty.

Trim excess strap. You'll want to leave about 2 inches of excess strap. **Note** if your dog is young and you expect it to grow, you'll want to leave extra strap to allow for future collar fastening.

Replacement straps are available. Call us at **1-800-826-5527**.

Note: Dogs' coats are as unique as dogs themselves. You may wish to try the longer contacts if your dog has a very heavy coat. Be certain your dog can feel stimulation before training begins.

Two Dog Systems

If you wish to add another receiver collar to the training system, accessory receiver collars are available where you bought your training system, or call us at **1-800-826-5527**.

Using the first Receiver collar, set your Transmitter to Dog 1 and turn it on with the Tone button. Set the first Receiver collar down. Holding the second Receiver collar, set your Transmitter to Dog 2, and turn on Receiver collar Two. The Transmitter will send a signal to the Dog symbol appearing in the Transmitter's display. To switch between Receiver collars, simply press the Dog Select button until the desired dog symbol displays.



Dog 1 symbol




Dog 2 symbol

Testing the Receiver


In order to make sure the Receiver is getting signals from the Transmitter, you may wish to test the Receiver from time to time.

To test:

1. Hold the included Test Light across the Receiver's contacts. (Refer to the illustration at the bottom of this column, the holes in the Test Light go over the contact tips; make sure the wire inside the hole touches the contact tip.)

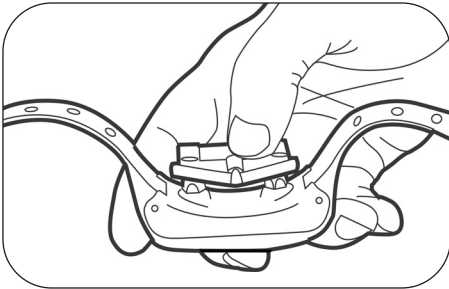

2. Press the Stimulation button on the Transmitter.
3. The Test Light lights up. The intensity of the Test Light depends on the stimulation level. The light is dim for low stimulation levels and is brighter for higher stimulation levels.

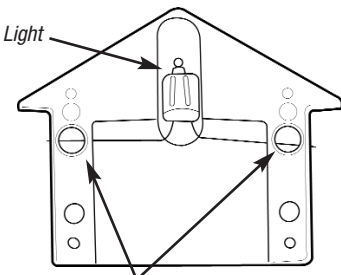

Receiver contacts touch wires inside these holes.

TRAINING

Always start training your dog with the lowest stimulation, and increase to a higher level only if necessary. You will know when you've reached the right level when your dog responds by twitching his head, neck, or shoulders, or by perking up his ears. If the dog vocalizes, you need to go to a lower level.

When Ranger is in **Continuous** mode, you control the duration of the stimulation by the length of time you press the Stimulation button. For a short stimulation, press and release the button. For a longer stimulation, hold the button down. A maximum of 10 seconds of Receiver stimulation may be applied before the safety lockout feature (**Over-stimulation protection, see below**) starts.

When Ranger is in **Momentary** mode, each stim button press (Stim or Alt Stim) produces one stim at the Receiver collar. Release the stim button in order to deliver another momentary (nick, or brief tap) stim.

Over-Stimulation Protection

The Transmitter can transmit continuously (Tone or Stim) for up to 10 seconds. If you attempt to transmit continuously for more than 10 seconds, the transmitter enters a 10 second lockout mode during which time no transmissions are allowed.

Training Tone Option

The Tone button causes the collar to produce a sound. No stimulation is delivered when the Tone button is pressed. The tone continues for as long as the button is held down, up to 10 seconds. A tone can help strengthen a dog's response to training. The tone can be used as a warning tone prior to pressing the stimulation button; or can be a reward tone when presented with praise, play, or food for good behavior.

The use of a training tone is optional. Its use varies among popular training methods. Some trainers choose to use the tone option as a warning tone prior to stimulation, others prefer to use the tone option as a reward tone, and still others prefer to not use it at all. It is imperative for successful dog training to use the tone option consistently throughout the training process. Whether the tone will mean reward or warning to your dog is up to the training method **you choose**.



Remember: the training tone **CANNOT** be both a warning tone and a reward tone. To learn more about tone training, consult a qualified dog training professional.

To program the Ranger Transmitter for Tone operation, see *Program the Stim Type (Tone Option)* on page 10.

Training Tips

- Watch the included DVD to get the basics for training your dog properly with a remote training system.
- We recommend your dog be at least six months old before starting a remote training system program.
- Always praise your dog for good behavior!
- Teach him what the commands mean before introducing the Receiver collar as a reinforcement tool.
- Keep training sessions brief, about ten minutes of training and then a rest or play period of at least equal length.
- Dogs learn through repetition. You may have better training success if you can elicit an undesired behavior when you can anticipate it. For example, if the dog misbehaves and jumps on visitors, have someone come in and out of the front door several times over a half-hour period. You'll be expecting it and will be ready to teach your dog the right behavior.
- Always end a training session on a positive note. Let the dog have success. This way he'll look forward to the next session.
- Training should be fun for both you and your dog. Never train when you are angry. If you get frustrated during training, stop and come back to it later. Your dog will learn better when you are both relaxed.

- The goal of training is to condition your dog to respond to your verbal commands in all situations. You should plan on using the Receiver collar for at least four months. A good rule is, once started with a remote training system, to regularly have the Receiver collar on when you take the dog out. This will ensure that he will always be imprinted with the correct response to your commands and that you are always in control.

Component Care

1. Use a soft damp cloth to clean the Transmitter and Receiver.
2. Do not use alcohol or cleaning solutions to clean the Transmitter and Receiver.
3. Dry the Transmitter and Receiver with a dry, lint-free cloth should they get wet.
4. Remove (Scout) batteries during long-term storage.

TROUBLESHOOTING

If the Transmitter and Receiver appear to be not working, try the following:

- Adjust the collar strap to fit better.
- Test the Receiver using the Test Light (Instructions are on page 16). If no light, recharge the Receiver's battery.
- If the Transmitter display is off, first try pressing any button. If the display remains off, recharge the Ranger Transmitter or replace Scout Transmitter batteries.
- Carefully turn on the components as shown in the Quick Start Guide (beginning of this manual).
- Check that the Receiver contacts are properly tightened.
- Ensure that the Receiver contacts are touching the dog's skin.
- If necessary, trim the dog's hair or use the longer contacts to ensure proper skin contact. Never shave the dog's neck.
- Try a stronger stimulation level.

If you still have a problem which you believe requires service, please call **1-800-826-5527** to speak with an INNOTEK consumer service agent. Many problems can be remedied over the phone without returning the unit for service.

IMPORTANT ADVICE

1. Read the entire Owner's Manual and follow all directions. If you have any questions, please call 1-800-826-5527.
2. This system is intended for use only on dogs. Never attempt to use it for any purpose not described in this manual.
3. Keep out of the reach of children
4. Never perform set-up procedures while the Receiver collar is on your dog.



5. Any collar worn for extended periods can cause a condition similar to bedsores, known as Pressure Necrosis. To reduce the possibility, you must do the following:
 - Never leave the collar on the dog for more than 12 hours per day.
 - Examine the dog's neck daily for any signs of a rash or a sore.
 - Supervise your dog during the first 2 days of training.
 - Check the fit to prevent excessive pressure; you should be able to insert one finger between the collar strap and your dog's skin.
 - Wash the dog's neck area and the contacts of the collar weekly with a washcloth and mild hand soap; rinse thoroughly.
 - If the condition persists beyond 24 hours, consult your veterinarian.

6. Metal tags and collars should be removed when using the receiver collar as they may interfere with proper operation.
7. Do not attempt to dismantle or repair any components of this system; doing so **will void the warranty in full.**

8. Realize that because dogs have unique temperament, there is no way of knowing how your dog will react to the introduction of a remote training system. For the safety of your dog, a long lead should be used during initial training so you have complete control of the situation.
9. If you have reason to believe that your dog may pose a danger to others, harm itself, or react adversely to the collar, do not rely solely on this product to train your dog. If your dog shows signs of growling, snarling, or biting while using the collar, stop immediately. Aggression in dogs has many causes. We recommend that you consult a knowledgeable professional dog trainer or animal behaviorist who has experience with aggressive dogs if your dog has shown any of these characteristics.
10. Occasionally, a dog cannot be trained to respond to a remote training collar. Sometimes even a properly trained dog may disobey a command. Therefore, INNOTEK, Inc., its distributors, and dealers cannot guarantee that the system will in all cases keep the customer's dog from disobeying commands.
11. To maintain maximum range, keep the Transmitter antenna away from all magnets, especially the very strong magnet in the Receiver's charging cradle.

COMPLIANCE WITH US FCC AND EUROPEAN TELECOMMUNICATIONS REGULATIONS

This INNOTEK® Remote Training System is designed to meet worldwide requirements for telecommunications compliance. This system contains both Receiver and Transmitter devices. This Class B digital apparatus complies with Canadian ICES-003, each transmitter device is compliant with RSS-210 and each receiver device complies with RSS-310 rules. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met. In the US, each transmitter device complies with Part 95 and/or Part 15 of the FCC rules; each receiver device complies with Part 15 of the FCC rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by INNOTEK, Inc. could void the user's authority to operate the equipment. This device may display indications as to where this system is compliant worldwide. Note that in some countries, the use of this INNOTEK® Remote Training System may be limited due to national frequency planning requirements, and the user is always responsible for respecting national and local rules before operating.

For Europe, this product is in full compliance with the provisions of the R&TTE – Directive 1999/05/EEC. The Declaration of Conformity can be found at: <http://www.innotek.net/world.shtml>

LIMITED LIFETIME WARRANTY

INNOTEK, Inc., warrants to the original retail purchaser, that your INNOTEK® brand FieldPro Remote Training System will be free from defects in material and workmanship, under normal use, for a period of two years from the date of the original retail purchase. This Limited Warranty excludes: accidental damage due to dog chews, lightning damage, neglect, alteration, or misuse.

For two years from the date of purchase, the original owner is eligible for expedited overnight delivery of replacement components, free product return shipping for the problem part, and no service fees. The expedited service is for in stock replacement parts only. Out of stock parts could cause delays. Should service be required, call 1-800-826-5527 to discuss replacement options and receive a return authorization number. Please do not return this product to the retailer.

After two years from date of original retail purchase, we will at our option, repair, replace, or upgrade your product at a fixed rate based upon the component.

INNOTEK, Inc., shall not be liable or responsible for any incidental or consequential damages resulting from the use of the product, or caused by any defect, failure, or malfunction of the product, whether a claim is based upon warranty, contract, negligence, or otherwise.

PATENTS

This product may be covered by one or more of the following patents:

U.S. Patent Numbers: 6,184,790; 6,327,999; 6,459,378; 6,807,720, and D417,835. Additional patents pending.

REGISTER YOUR PRODUCT

Your product can be registered on our website at www.innotek.net

Note: Features & Specifications are subject to change without notice.

INNOTEK is not responsible for unintentional errors or omissions in this manual or on its packaging. To check for updates to this manual, visit our website at www.innotek.net

INDEX

A

AC Adapter 3, 6

Advice, Important 19

Alt Stim 8, 11

Alternate Stimulation 8, 11

Antenna 4, 7

B

Batteries 3, 6

Battery 12

 Cautions 12

 Indicator 12

 Ranger 12

 Scout 12

Belt Clip 12

C

Charge Port 3

Charge Receiver 3, 6

Clip, Belt 12

Cold Weather Operation 13

Collar, Fit 4, 7, 15

Compliance 20

Component Care 18

Continuous 16

Cradle 3, 6

D

Default Settings 10

F

FCC 20

Fit Collar 4, 7, 15

G

Guide, Quick Start, Ranger 3

Guide, Quick Start, Scout 6

I

Important Advice 19

K

Keypad

 Buttons 7

 Ranger 4

 Scout 7

Kit, Ranger 2

Kit, Scout 5

L

Lanyard 13

Lockout 16

O

Operating Range 13

Operation, Cold Weather 13

Option, Tone 10, 17

P

Patents 21

Port, Charge 3

Power Up 4, 7

Programming The Transmitter 10

Protection, Over-Stimulation 16

INDEX

Q

- Quick Start Guide, Ranger 3
- Quick Start Guide, Scout 6

R

- Range, Operating 13
- Ranger Keypad 4
- Ranger Kit 2
- Receiver 13
 - Fitting 15
 - LED Indicator 13
 - Over-Stimulation Protection 16
 - Power Up 14
 - ReadyTest™ 14
 - Self-Test 14
 - Status Indicators 14
 - Testing 16
- Receiver, Charge 6

S

- Safety 16
- Scout Kit 5
- Settings, Default 10
- Stimulation, Alternate 8, 11

T

- Training 16
- Tips 17
- Training Tone Option 10, 17
- Transmitter 8
 - Battery Indicator 9
 - Display 9
 - Keypad Buttons 4, 8
 - Rapid Ramp™ 8
- Transmitter, Programming 10
- Troubleshooting 18
- Two Dog Systems 15

W

- Warranty 20
- Weather, Cold, Operation 13

Y

- Y Cable 3



INNOTEK®

Quicker Training. Better Dogs.

INNOTEK, Inc.
1-800-826-5527
www.innotek.net

INNOTEK® and the INNOTEK® logo are registered trademarks of INNOTEK, Inc. FieldPro™ is a trademark of INNOTEK, Inc.
All other product and service names are the property of their respective owners.

© 2006, INNOTEK, Inc. All rights reserved.